



C&C 27 Mark III Cabin Top Traveler Bracket


Start with 1/8" stainless sheet (thinner would likely do).

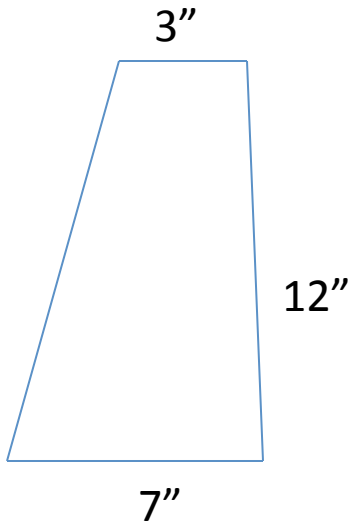

Bend 12" side up into flange, 90 degrees, 1 inch.

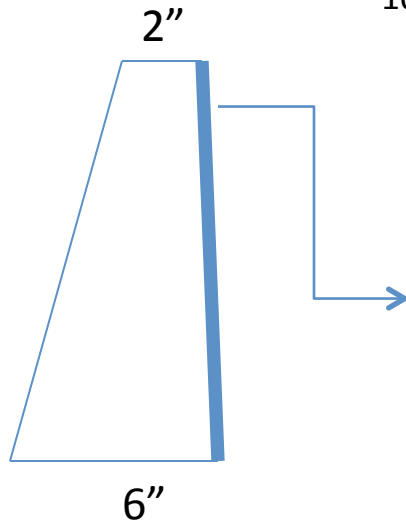

Notch bracket flange at 3" from top for 90 degree bend (more or less, check your boat) and at 9" for 30 degree bend. Slit flange at 10.5".

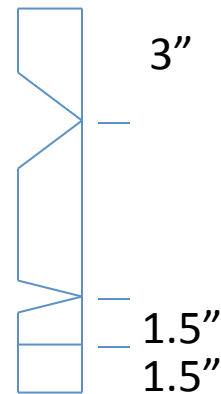

Form into bracket shape, closing 90 and 30 degree notches, while opening slit to conform to hull. Weld notches, fill slit opening. Shape arrowed corners to preference.

